

VOLVO CONSTRUCTION EQUIPMENT MATRIS REPORT

Machine model A40G	SerialNo 341218	Operating Hours 4623.4	Reading Date 1/6/2019
Company name Flagler Tampa FL	Dealer	Report Issuer	
Contact name	Technician Hilton	Primary Application Earth moving construction	
Site	Workorder	Ground Condition	

MATRIS Reading, Summary / Recommendation




Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

Main equipment	Type	Equipment
	Tyre size/class	Sold without tyres
	Body extensions	Not mounted
	Tail-gate	Not mounted
	Extra spillguard	Not mounted
	Wear plates	Not mounted
	Pattern	None



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

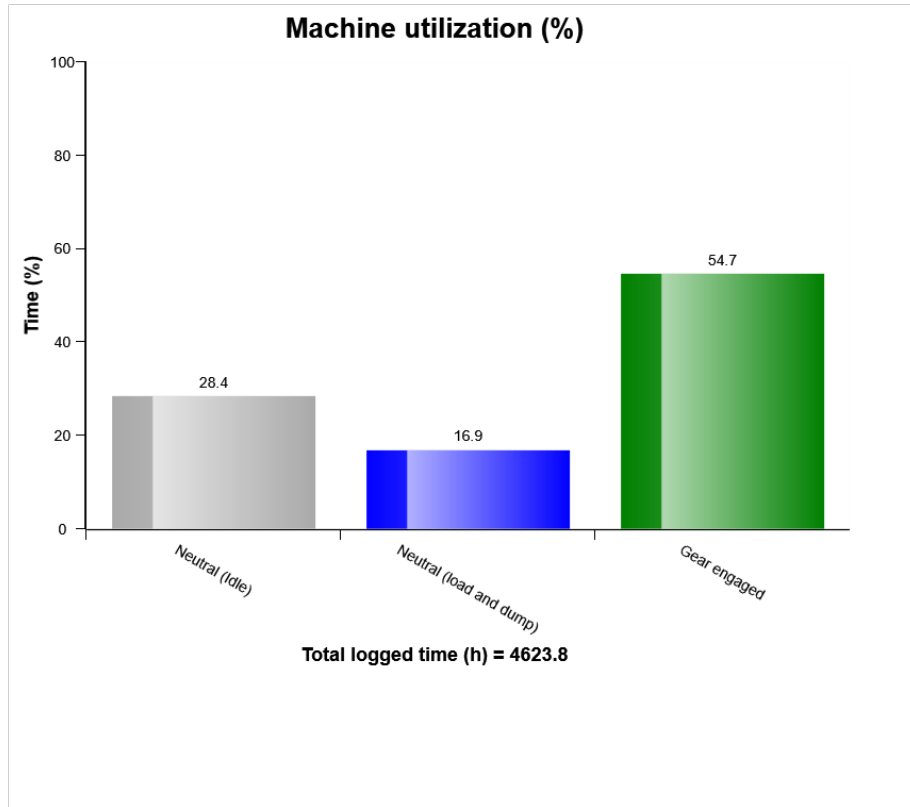


The diagram shows a simplified presentation of the machines utilization based on the relation between time in gear and time in neutral. The "Gear engaged " includes both forward and reverse gears.

This presentation of the machines utilization can only be seen as a guideline value since a full calculation of the machines utilization is more advanced. E.g. "Neutral" includes time for loading and dumping which should be seen as operating time.

High percentage of neutral time may indicate that the machine is underused due to e.g. under dimensioned loading tool or oversized hauler fleet




Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

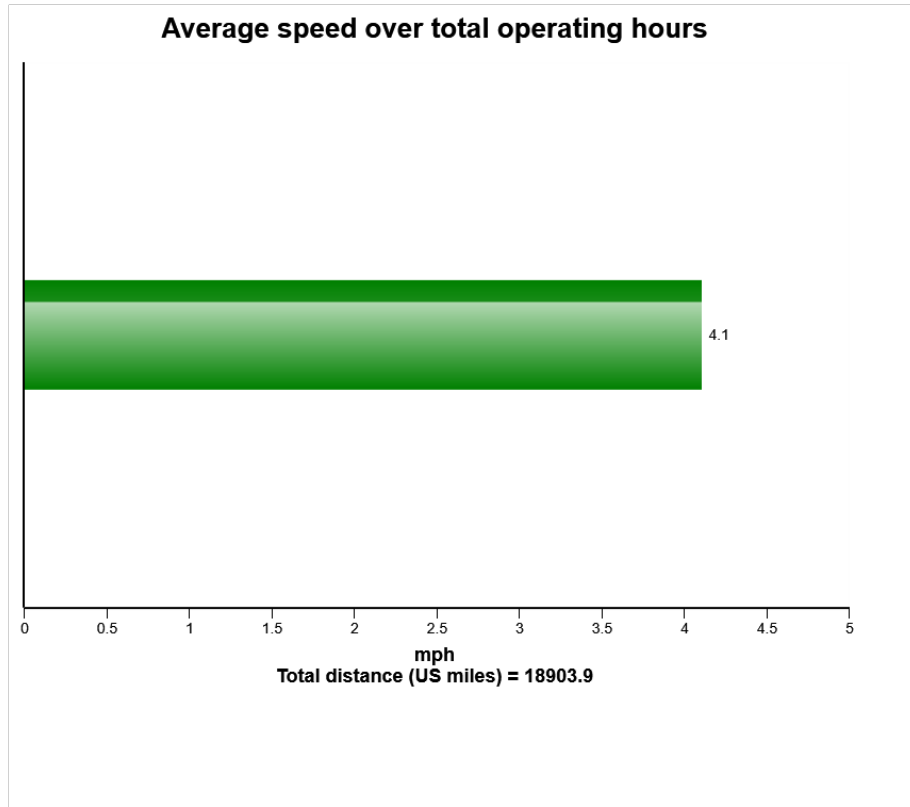

The diagram shows the machines average speed based on the total operating hours




Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

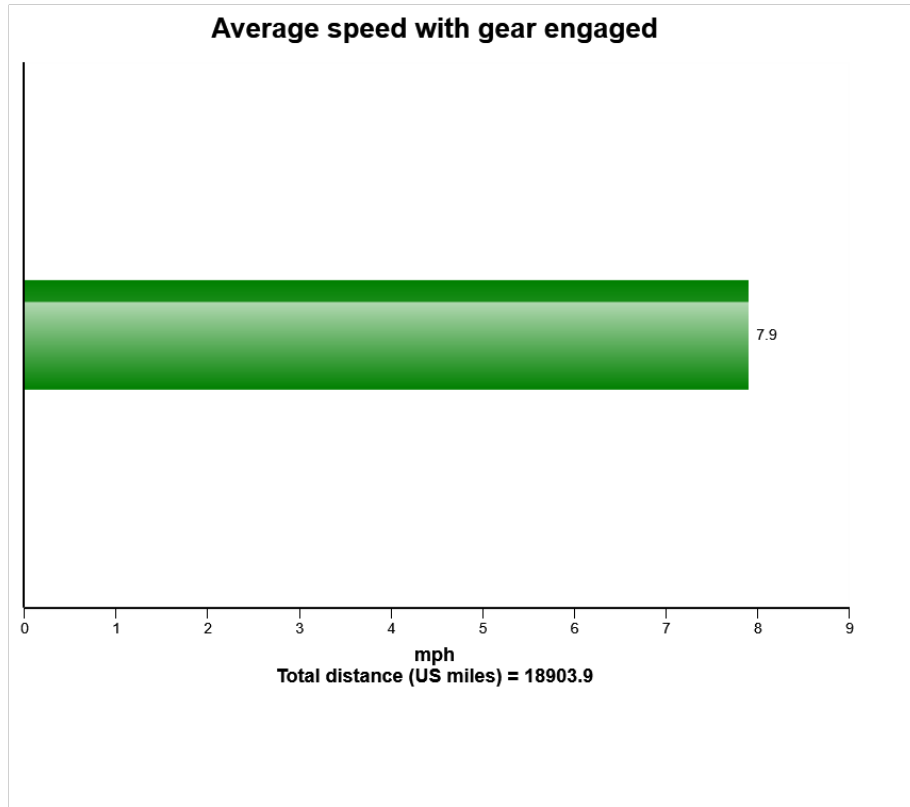

The diagram shows the machines average speed based on the operating hours with gear engaged.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

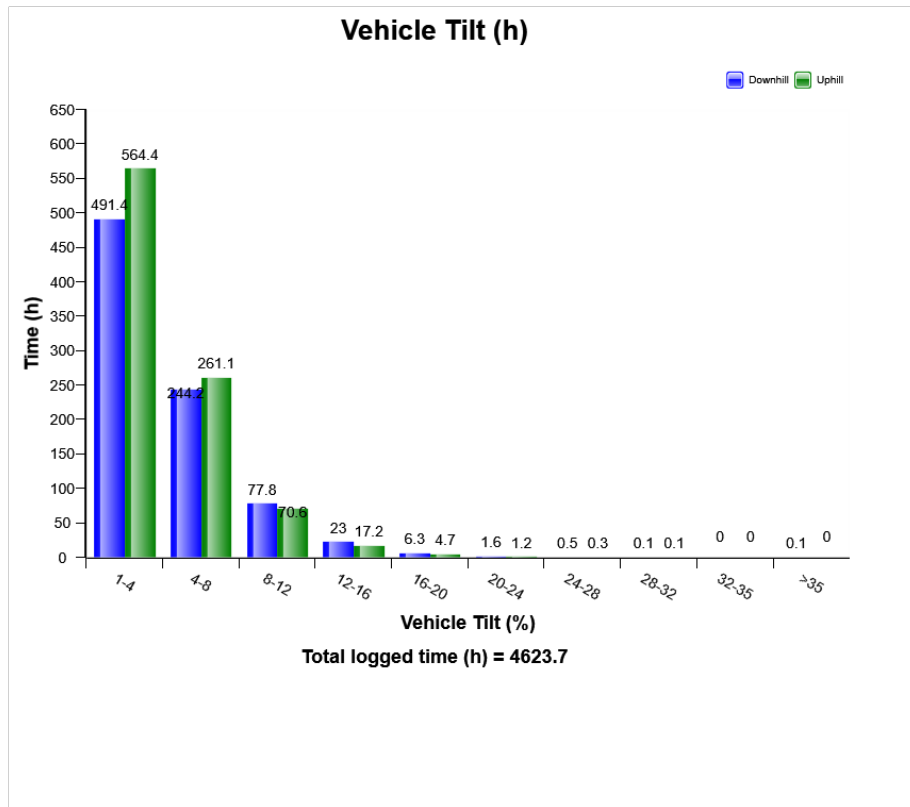

The diagram shows the distribution of the longitudinal tilt in percent (not degrees), the criteria to get registrations is that the vehicle speed exceeds 1km/h (0,62mph) and that the engine is on.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

Accumulated performance
Total logged time (h) =


Total logged time (h) =	2186.1
Fuel consumption (US-gallons)	12649
Production (ton,US)	477058
Ton/h	218.2
Ton/gal	37.7
Fuel efficiency (US Gal/ton)	0.03
Number of cycles	12042
Cycles overloaded (%)	1
Load utilisation / cycle (%)	92

The table shows the accumulated values for respectively area stated in the table.

Values are saved over the life of the machine only when the engine is running.




Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

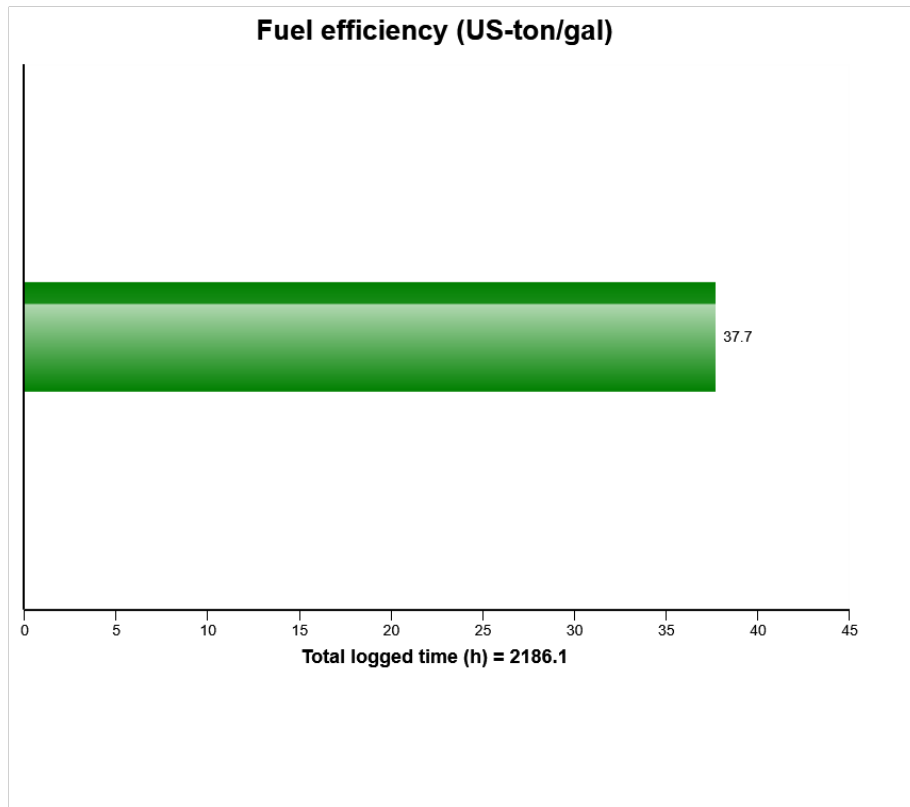

The presentation display the average produced tonne per fuel unit over the machines lifetime





Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

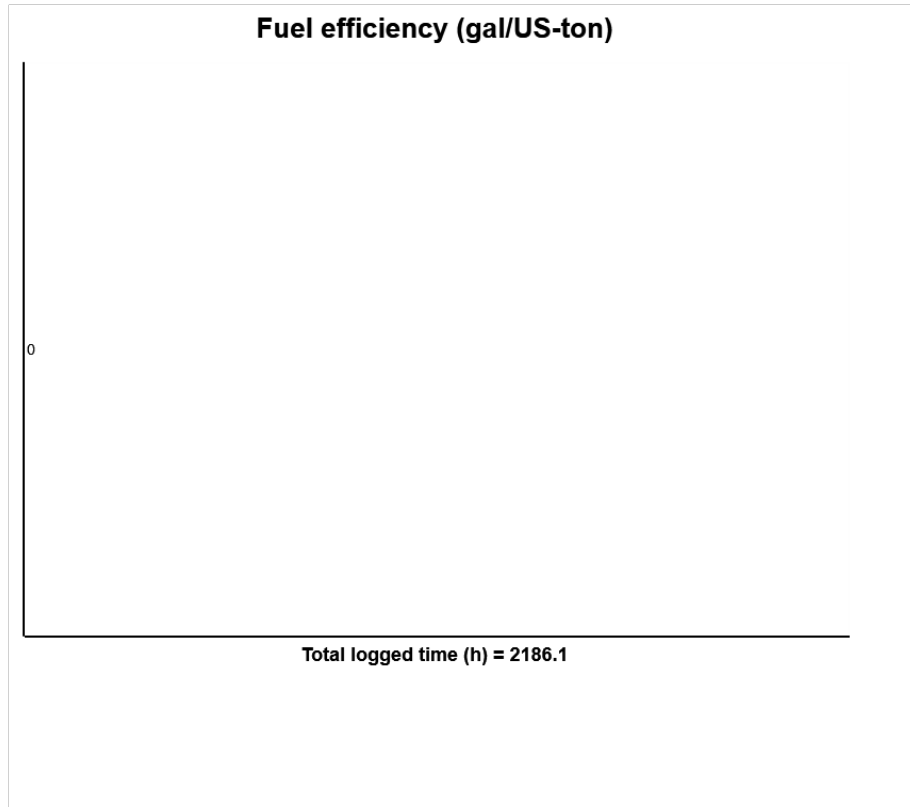


The presentation shows the average fuel consumption per tonne over the machines lifetime



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

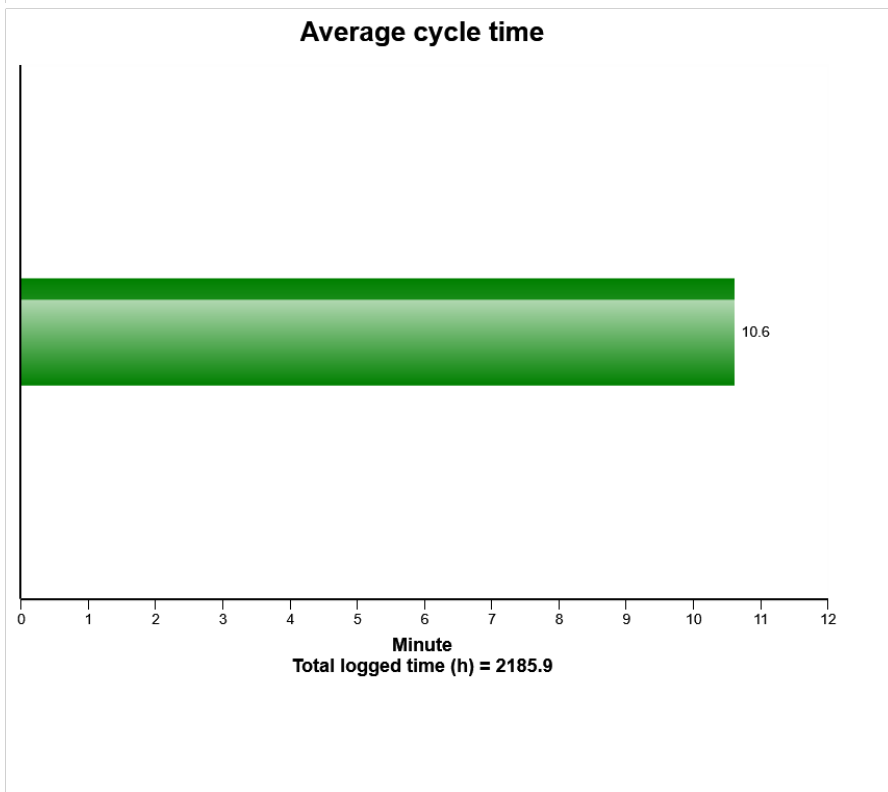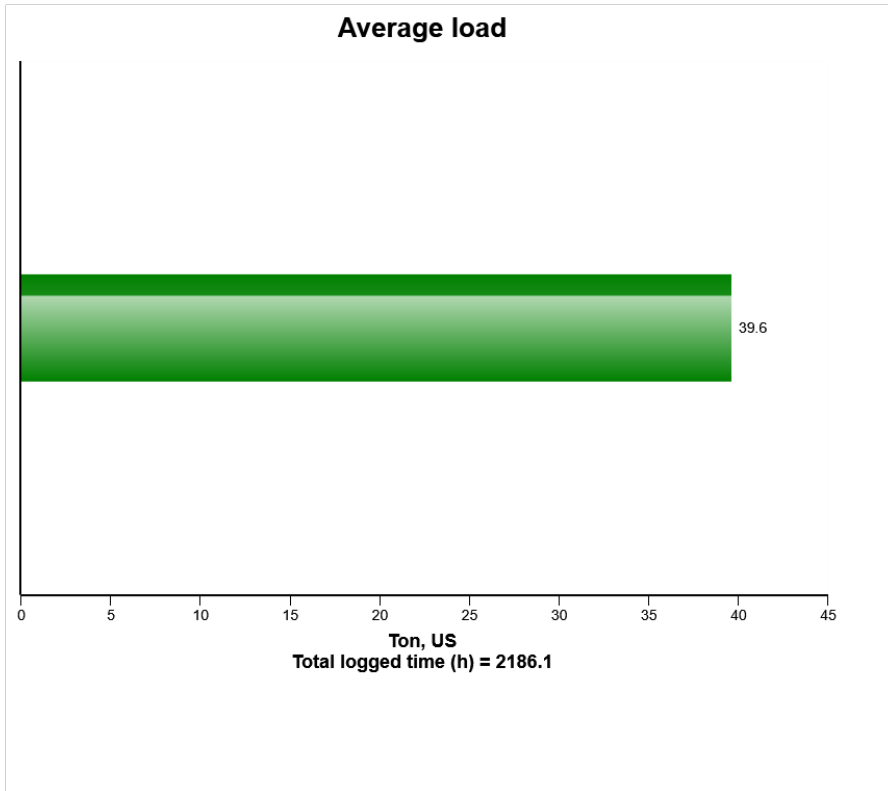


Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

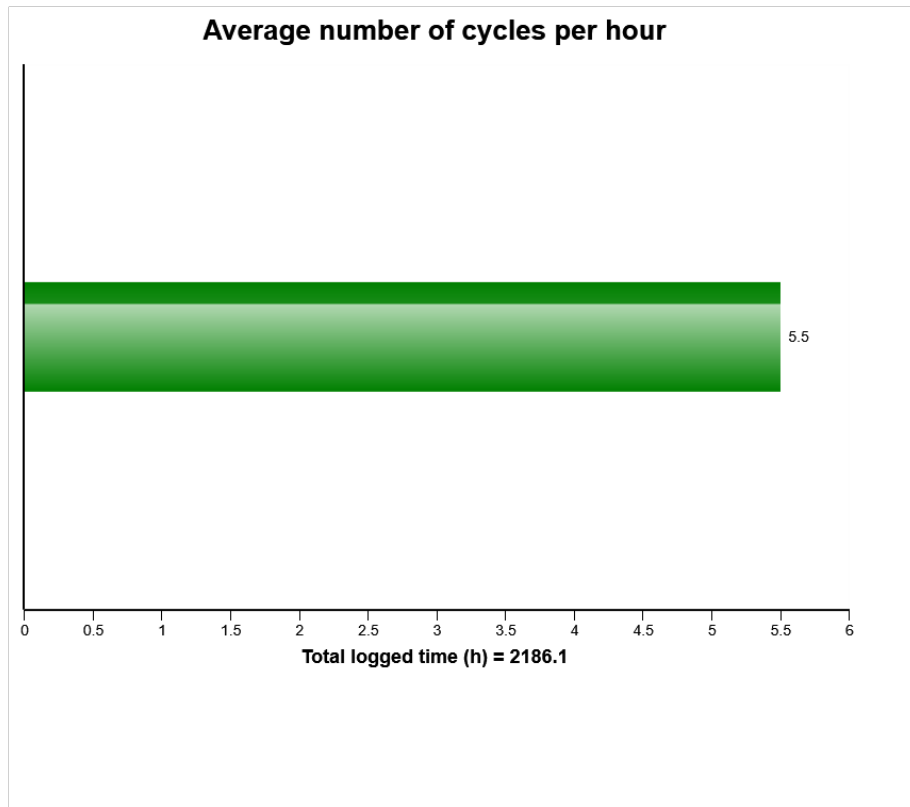

The presentation shows the average number of cycles per hour over the machines lifetime.




Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

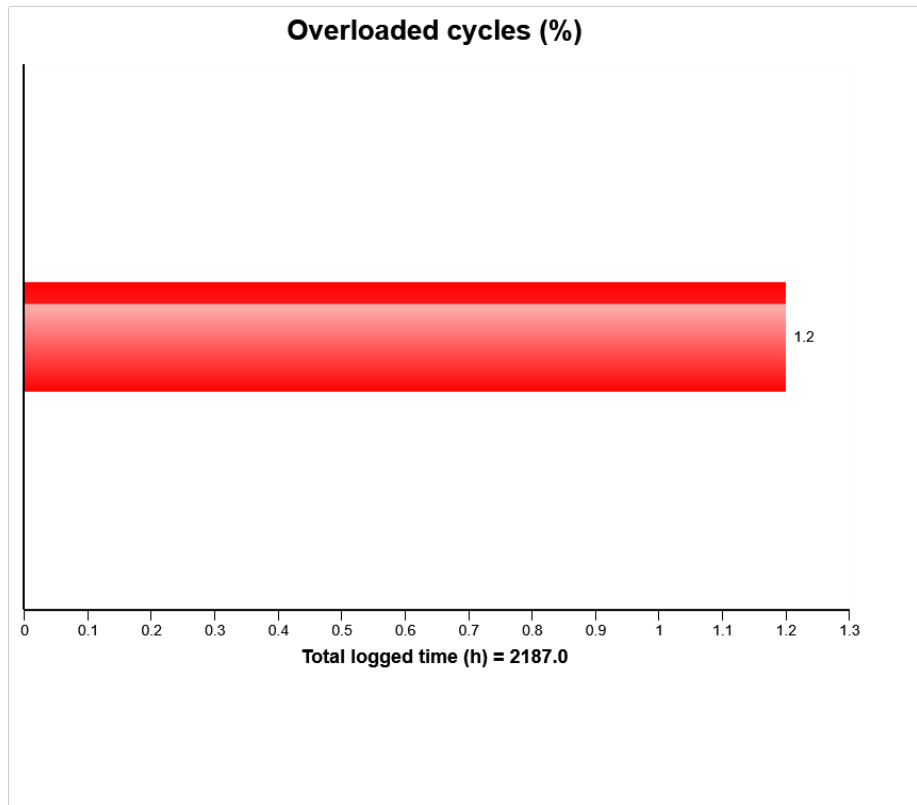

An error has occurred while processing HtmlTextBox 'htmlTextBox1':
The ':' character, hexadecimal value 0x3A, cannot be included in a name. Line 1, position 656.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

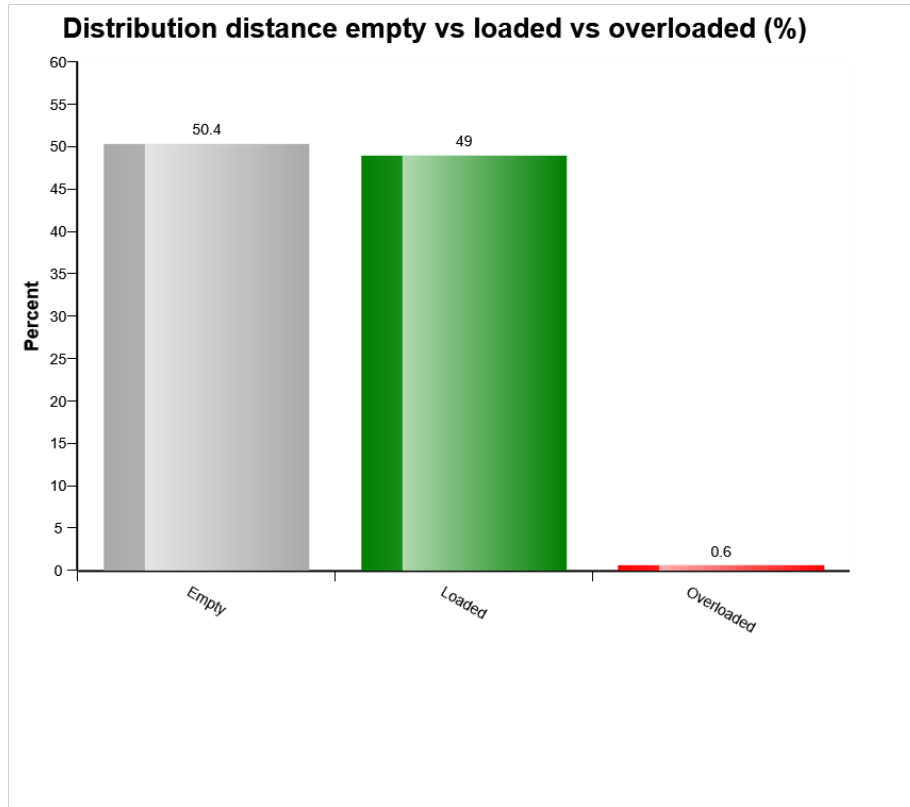


Much time operated with overload puts unnecessary stress to the machine which could lead to shorter machine life and higher repair and maintenance cost.


Much time operated empty could indicate that the machine has been operated a lot when not in production.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

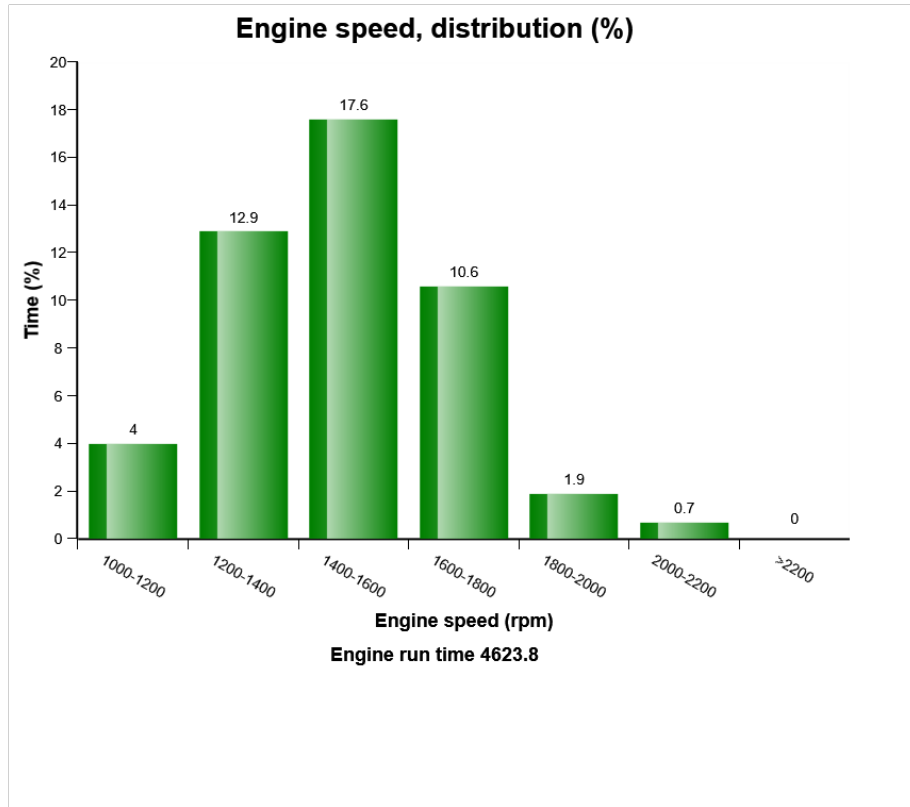

Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

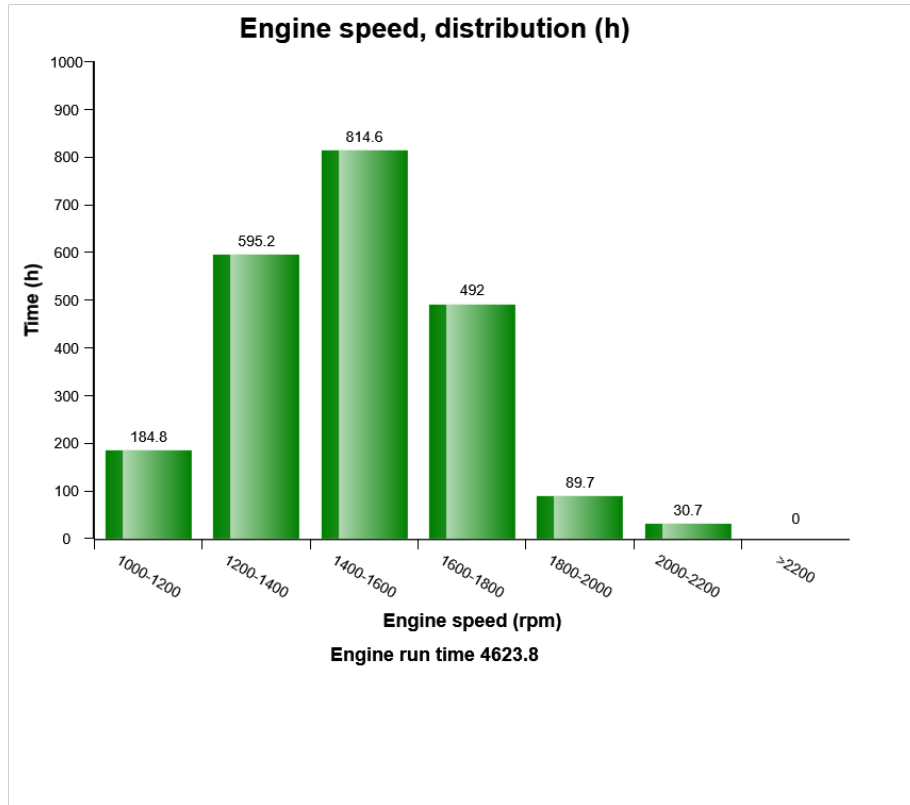

Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

**High engine oil temperature
Total number of occurrences = 0**

	Op hours	Year	Month	Day	Hour	Minute	Duration (sec)	Extreme (° F)
A	0	2000	0	0	0	0	0	32
B	0	2000	0	0	0	0	0	32
C	0	2000	0	0	0	0	0	32
D	0	2000	0	0	0	0	0	32
E	0	2000	0	0	0	0	0	32
F	0	2000	0	0	0	0	0	32
G	0	2000	0	0	0	0	0	32
H	0	2000	0	0	0	0	0	32
I	0	2000	0	0	0	0	0	32
J	0	2000	0	0	0	0	0	32

Definition :

This type of table shows the latest occasions when a specific event has occurred. When a specified criteria is fulfilled a registration is made. Each table row corresponds to one occasion. Operating hours is displayed in the first column, followed by year, month, day, hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed

Duration :

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Extreme value :



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019


The extreme value column displays the most extreme value during the event.

Criteria :

The criteria to get an registration, is that the alarm signal for high engine oil temperature is active and that the diesel engine is running.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

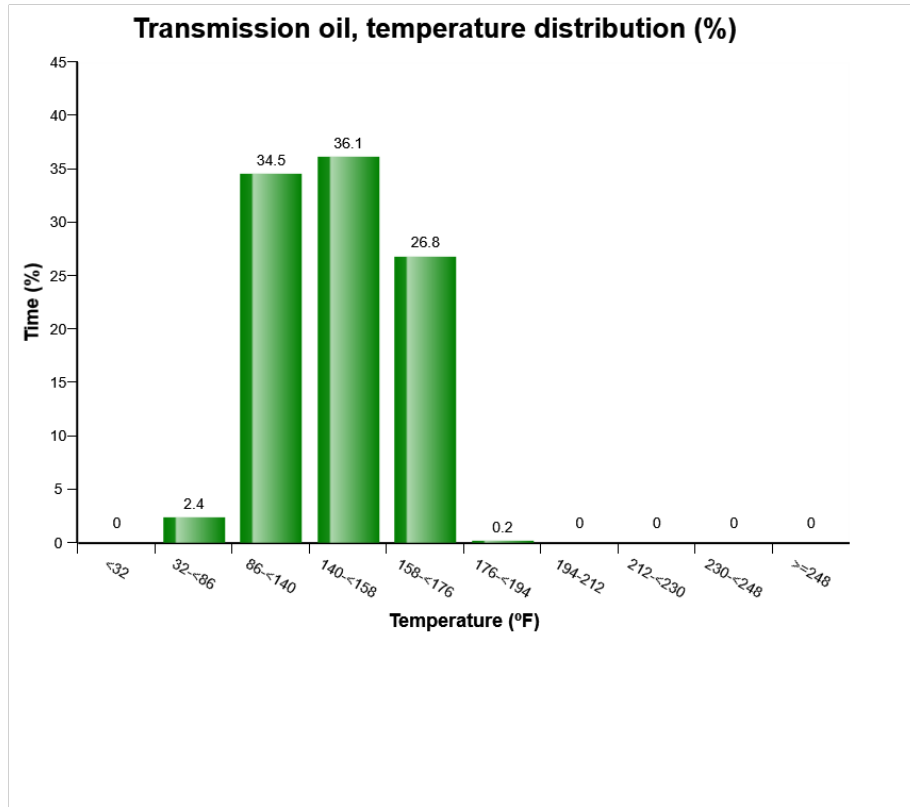

The diagram shows the transmission oil temperature in various temperature ranges. The time is displayed in the following ten temperature ranges:

<32°F Temperatures below 32°F

32-86°F Temperatures from 32°F until 86°F

86-140°F Temperatures from 86°F until 140°F

140-158°F Temperatures from 140°F until 158°F

158-176°F Temperatures from 158°F until 176°F

176-194°F Temperatures from 176°F until 194°F



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

194-<212°F Temperatures from 194°F until 212°F

212-<230°F Temperatures from 212°F until 230°F

230-<248°F Temperatures from 230°F until 248°F

>248°F Temperatures over 248°F


The bar that describes temperatures from 230°F until 248°F is yellow and means that the oil has begun to be overheated. Driver has been given orange central warning

The bar that describes >248°F is red and means that the oil has been overheated. Driver has been given red central warning.

Oil temperatures exceeding 230°F must be avoided since the properties of the oil are degraded



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

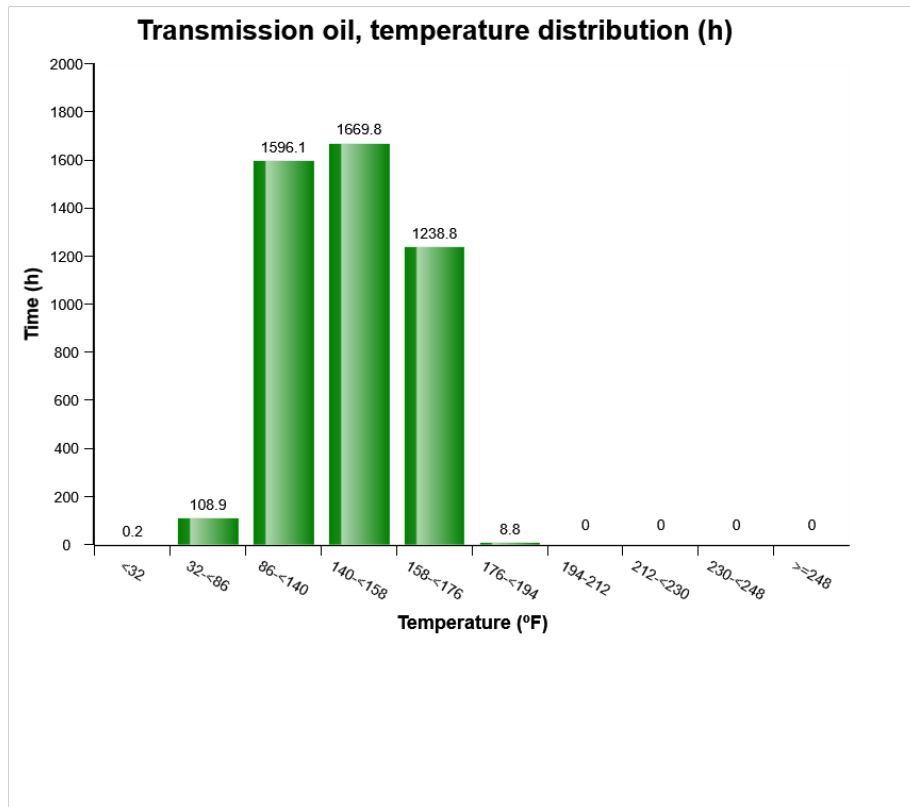

The diagram shows the transmission oil temperature in various temperature ranges. The time is displayed in the following ten temperature ranges:

<32°F Temperatures below 32°F

32-<86°F Temperatures from 32°F until 86°F

86-<140°F Temperatures from 86°F until 140°F

140-<158°F Temperatures from 140°F until 158°F

158-<176°F Temperatures from 158°F until 176°F

176-<194°F Temperatures from 176°F until 194°F



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

194-<212°F Temperatures from 194°F until 212°F

212-<230°F Temperatures from 212°F until 230°F

230-<248°F Temperatures from 230°F until 248°F

>248°F Temperatures over 248°F


The bar that describes temperatures from 230°F until 248°F is yellow and means that the oil has begun to be overheated. Driver has been given orange central warning

The bar that describes >248°F is red and means that the oil has been overheated. Driver has been given red central warning.

Oil temperatures exceeding 230°F must be avoided since the properties of the oil are degraded



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

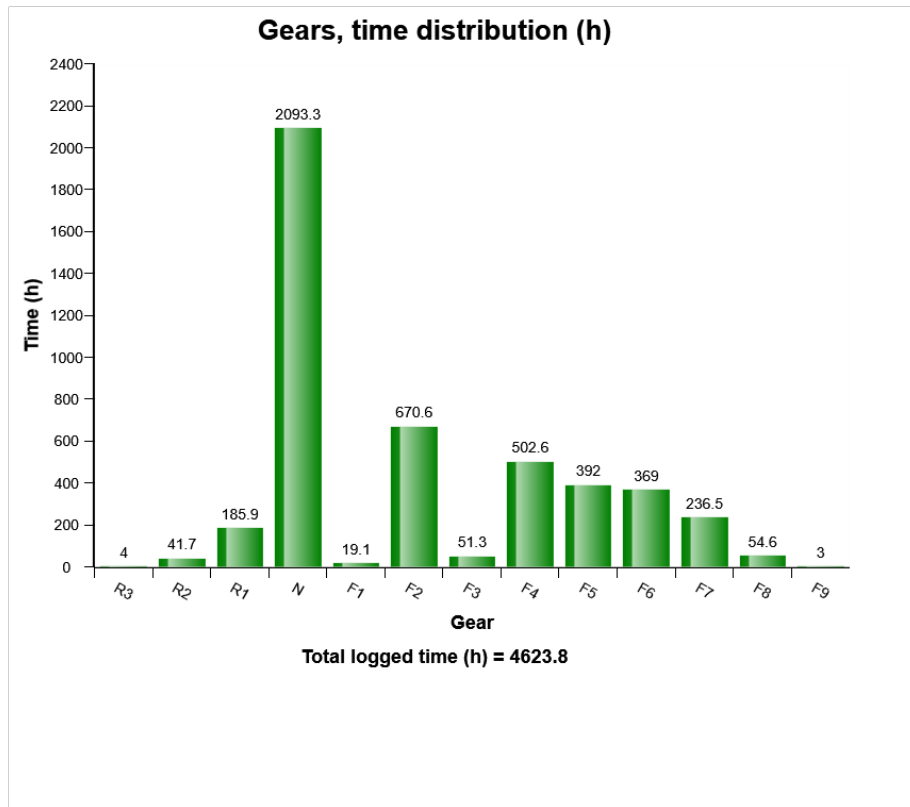


The diagram shows the time for each gear. Each bar represents a gear.

How the time is distributed between the gears depends on the operating conditions.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

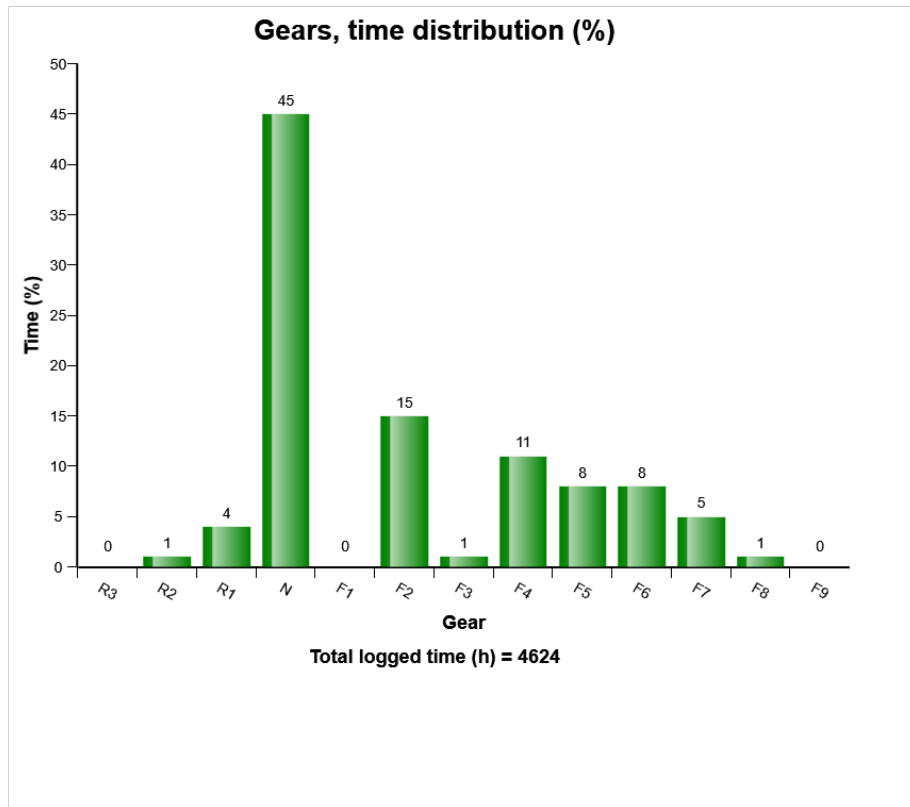


The diagram shows the time for each gear. Each bar represents a gear.

How the time is distributed between the gears depends on the operating conditions.




Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

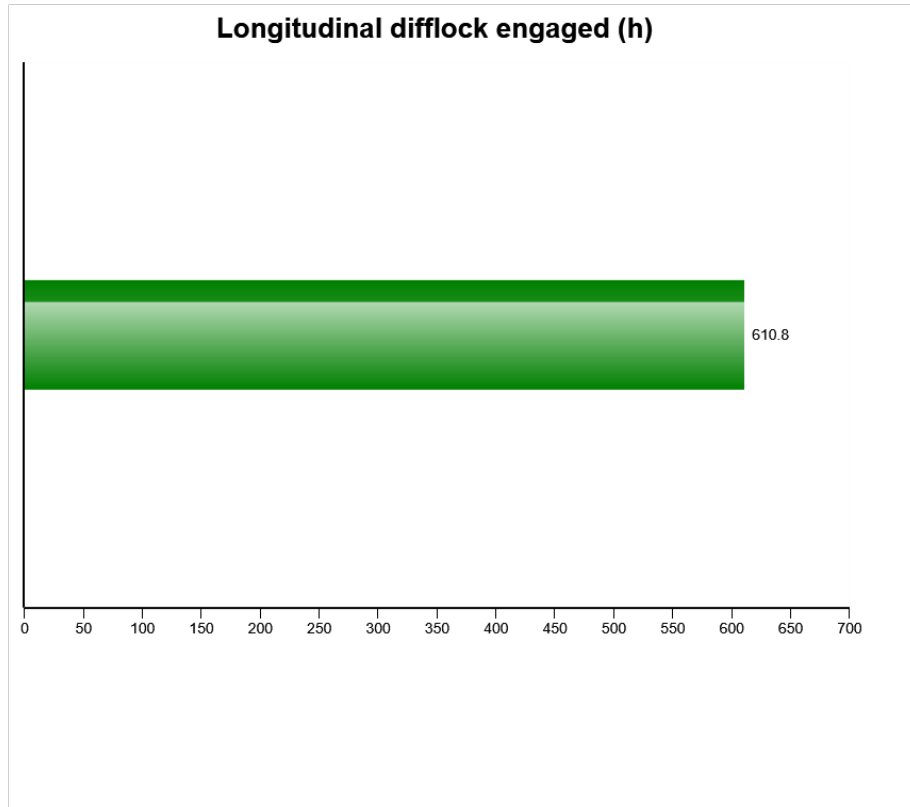

The diagram shows how long time in hours the longitudinal difflock has been engaged. The presentation only shows time when the machine is moving as this is when the wear on the difflock occurs. The difflock should always be disengage when not needed to avoid unnecessary wear.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

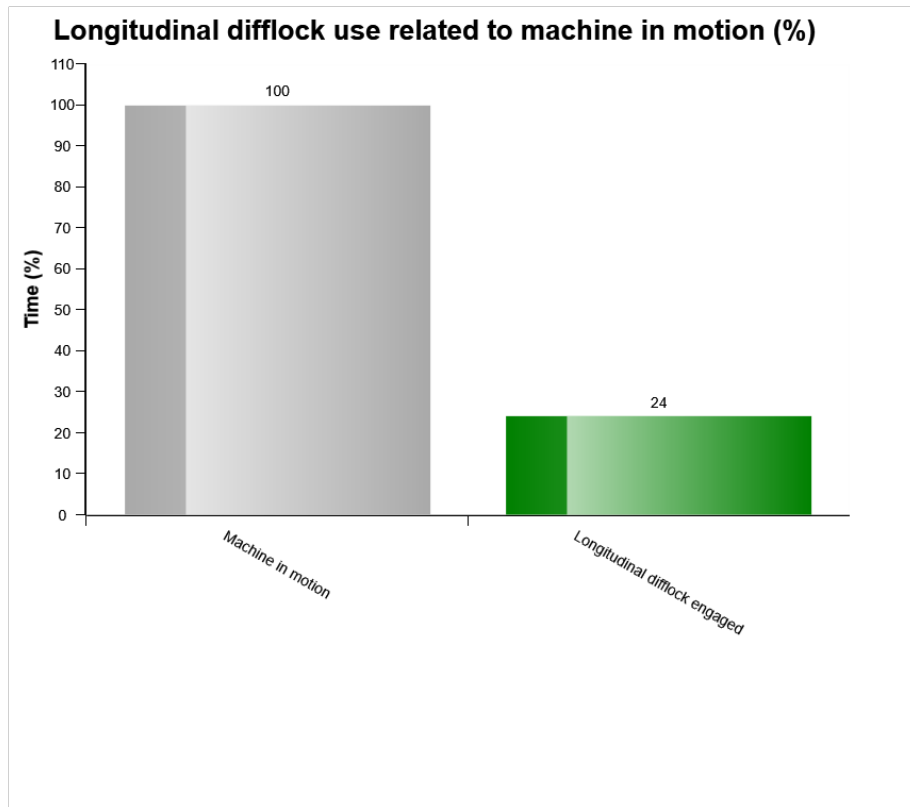

The diagram shows the percentage of engaged longitudinal difflock in relation to machine in motion.

The longitudinal difflock should always be disengaged when not needed to reduce wear.

The normal use of the longitudinal difflock in relation to the time that the machine has been operated depends on the operating conditions. Generally, the more offroad applications the machine operates in, the higher the longitudinal difflock use shall be in relation to the time that the machine has been operated. Also operating in uphill conditions on slippery surface can require longitudinal difflock.

Also check " Longitudinal difflock engaged (h)"



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

**Transmission oil pressure low
Total number of occurrences = 257**

Op hours	Year	Month	Day	Hour	Minute	Duration (sec)	Extreme (psi)
4296	2018	10	25	6	50	17	59
4307	2018	10	26	8	24	3	107
4307	2018	10	26	7	36	3	106
4314	2018	10	27	6	57	4	104
4319	2018	10	28	9	47	8	97
4319	2018	10	28	6	53	23	59
4319	2018	10	28	10	31	16	67
4335	2018	10	31	13	9	1	235
4338	2018	11	1	6	57	20	58
4354	2018	11	2	12	41	1	228
4365	2018	11	6	6	49	1	115
4365	2018	11	6	6	56	10	78
4365	2018	11	6	6	57	9	81
4374	2018	11	7	6	42	16	64
4392	2018	11	8	14	30	0	223
4394	2018	11	9	6	41	11	73
4394	2018	11	9	7	15	3	104
4396	2018	11	9	8	30	7	241
4398	2018	11	9	10	51	1	232
4400	2018	11	10	6	49	4	106

Definition :

This type of table shows the latest occasions when a specific event has occurred. When a specified criteria is fulfilled a registration is made. Each table row corresponds to one occasion. Operating



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

hours is displayed in the first column, followed by year, month, day, hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed.

Duration :

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Extreme value :


The extreme value column displays the most extreme value during the event.

Criteria :

In order for an occurrence of low transmission oil pressure to be recorded in a data point and the count to increment by 1, the transmission oil pressure state must change from "normal" or "error" to "low." The event of low transmission oil pressure will end when the status changes from "low" back to "normal" or "error."



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

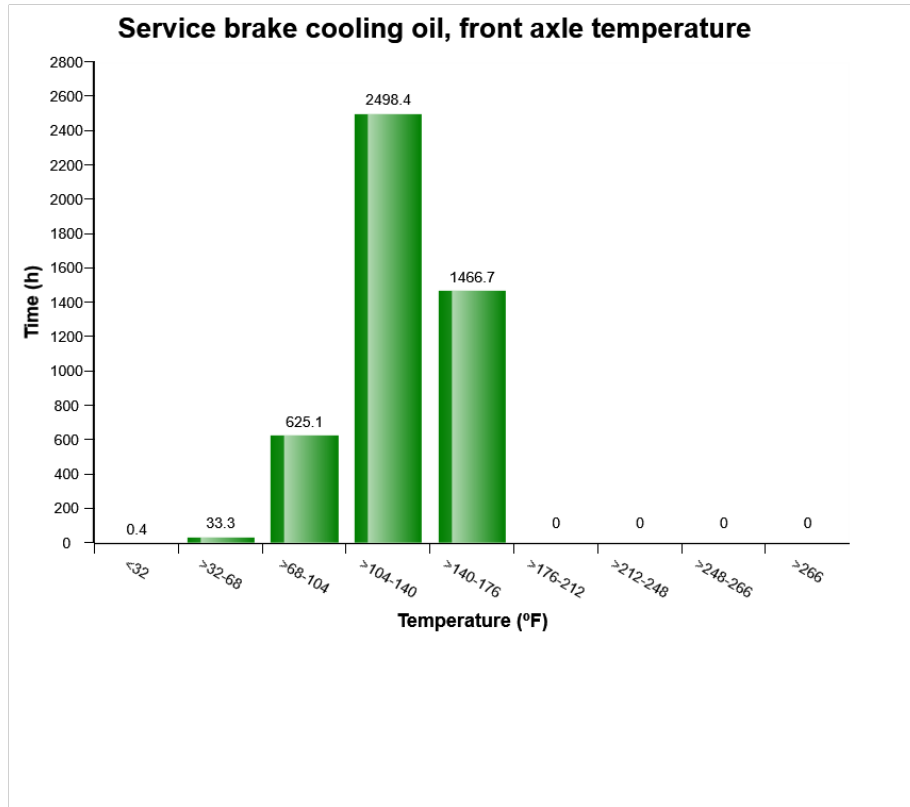


The diagram shows the front axle brake cooling oil temperature. The temperatures are divided into ranges, yellow bar (>248-266°F) and red bar (>266°F) shows abnormal temperatures. The temperature is registered in the line from the front axle to the oil cooler, that is, the warmest oil in the circuit.

The temperature shown by yellow and red bars degrade the properties of the cooling oil, and may be the result of incorrect and hard operation of the machine. Check the brake pressure distribution in the diagram "Service brake pressure, distribution (%)". If the brake cooling oil temperature is high despite normal distribution of service brake pressure, there is probably a malfunction in the brake cooling circuit



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

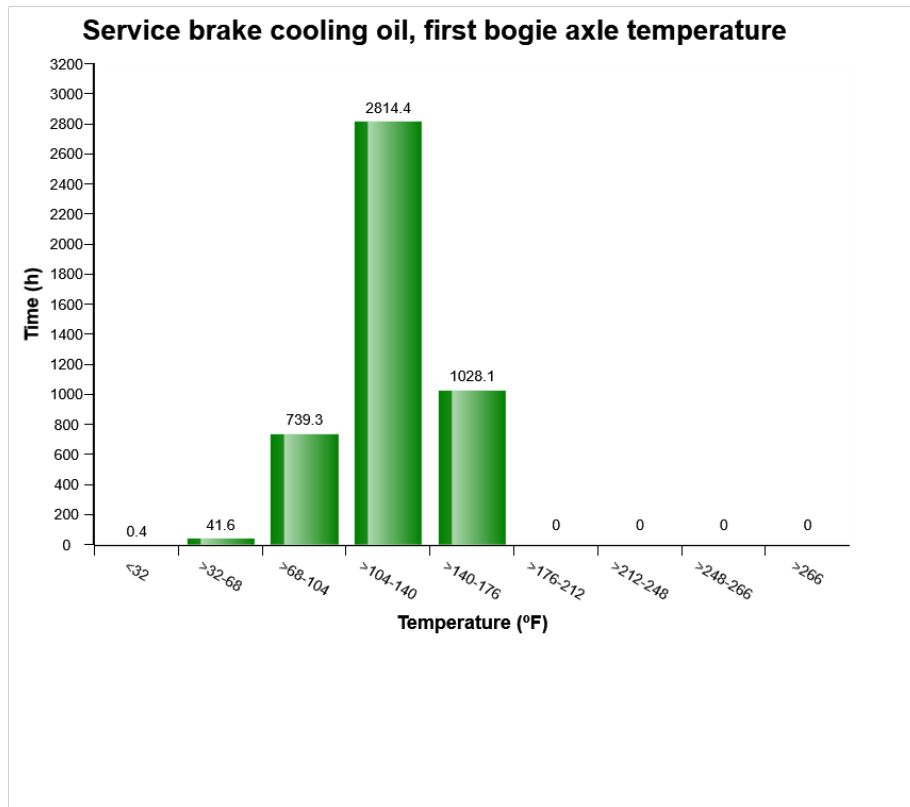


The diagram shows the first bogie axle brake cooling oil temperature. The temperatures are divided into ranges, yellow bar (>248-266°F) and red bar (>266°F) shows abnormal temperatures. The temperature is registered in the line from the first bogie axle to the oil cooler, that is, the warmest oil in the circuit.

The temperature shown by yellow and red bars degrade the properties of the cooling oil, and may be the result of incorrect and hard operation of the machine. Check the brake pressure distribution in the diagram "Service brake pressure, distribution (%)". If the brake cooling oil temperature is high despite normal distribution of service brake pressure, there is probably a malfunction in the brake cooling circuit.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019


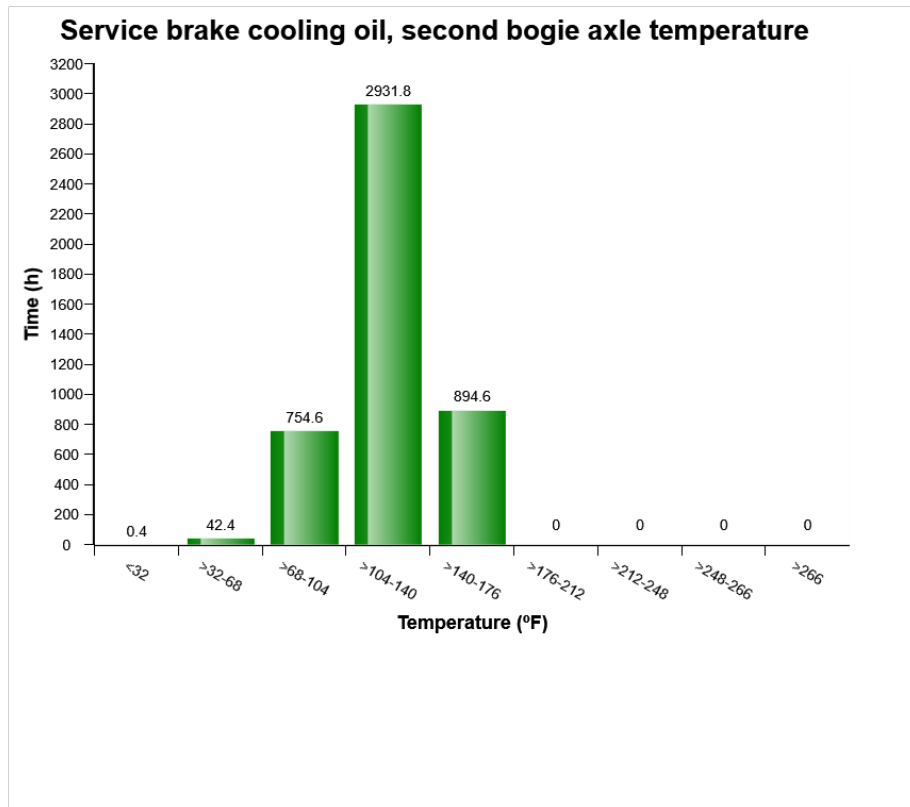


The diagram shows the front axle brake cooling oil temperature. The temperatures are divided into ranges, yellow bar (>248-266°F) and red bar (>266°F) shows abnormal temperatures. The temperature is registered in the line from the second bogie axle to the oil cooler, that is, the warmest oil in the circuit.

The temperature shown by yellow and red bars degrade the properties of the cooling oil, and may be the result of incorrect and hard operation of the machine. Check the brake pressure distribution in the diagram "Service brake pressure, distribution (%)". If the brake cooling oil temperature is high despite normal distribution of service brake pressure, there is probably a malfunction in the brake cooling circuit.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

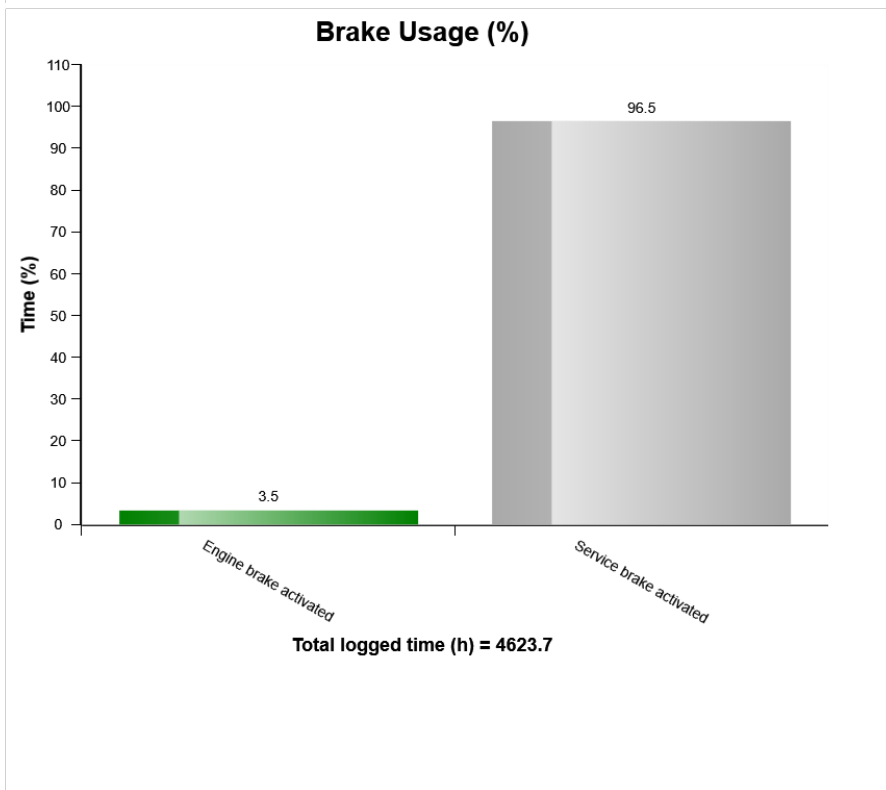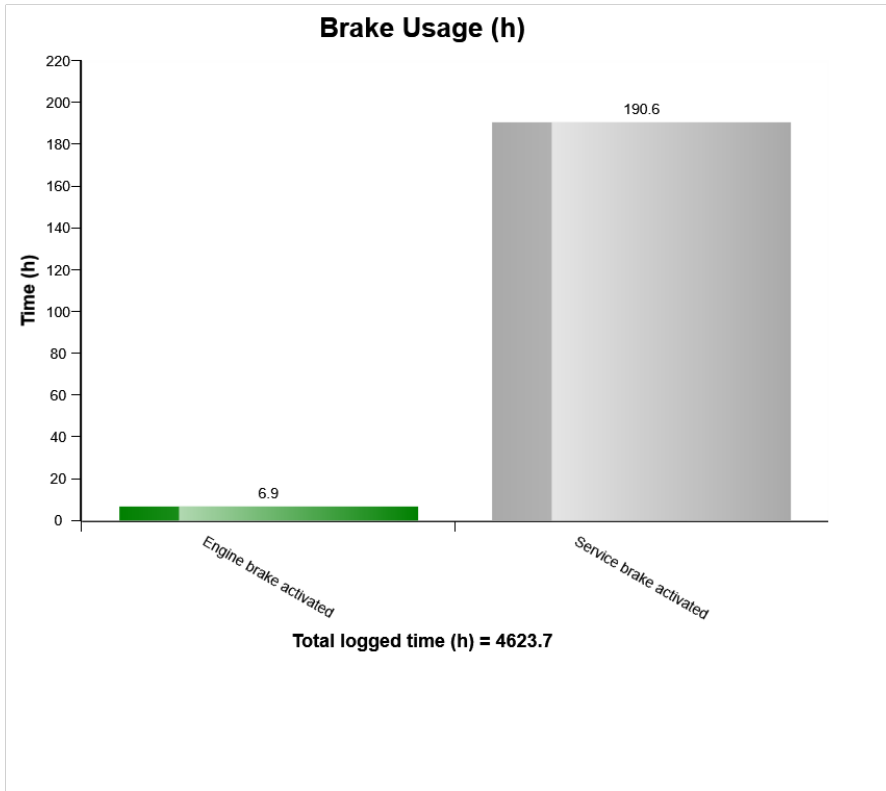

Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

Low Brake Servo Pressure
Total number of occurrences = 1

	Op hours	Year	Month	Day	Hour	Minute	Duration (sec)	Extreme (psi)
B	0	2000	0	0	0	0	0	0
C	0	2000	0	0	0	0	0	0
D	0	2000	0	0	0	0	0	0
E	0	2000	0	0	0	0	0	0
F	0	2000	0	0	0	0	0	0
G	0	2000	0	0	0	0	0	0
H	0	2000	0	0	0	0	0	0
I	0	2000	0	0	0	0	0	0
J	0	2000	0	0	0	0	0	0
A	716	2017	1	5	11	28	0	2281

Definition :

This type of table shows the latest occasions when a specific event has occurred. When a specified criteria is fulfilled a registration is made. Each table row corresponds to one occasion. Operating hours is displayed in the first column, followed by year, month, day, hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed

Duration :

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Extreme value :



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019


The extreme value column displays the most extreme value during the event.

Criteria :

In order for an occurrence of low brake servo pressure to be recorded in a data point and the count to increment by 1, the low brake servo pressure state must be alarm. Gear not in Neutral and engine must be on.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

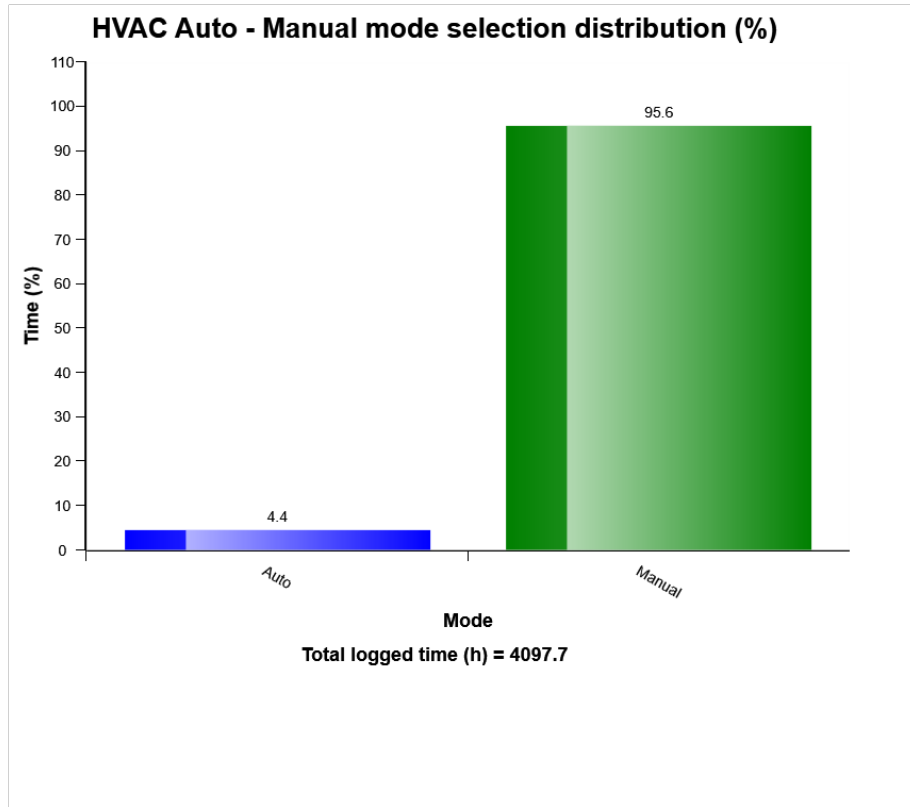


Definition:

The diagram describes auto-manual mode selection distribution of HVAC system in machine while it Works. The share of each mode compared to Total time of HVAC operation is displayed.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

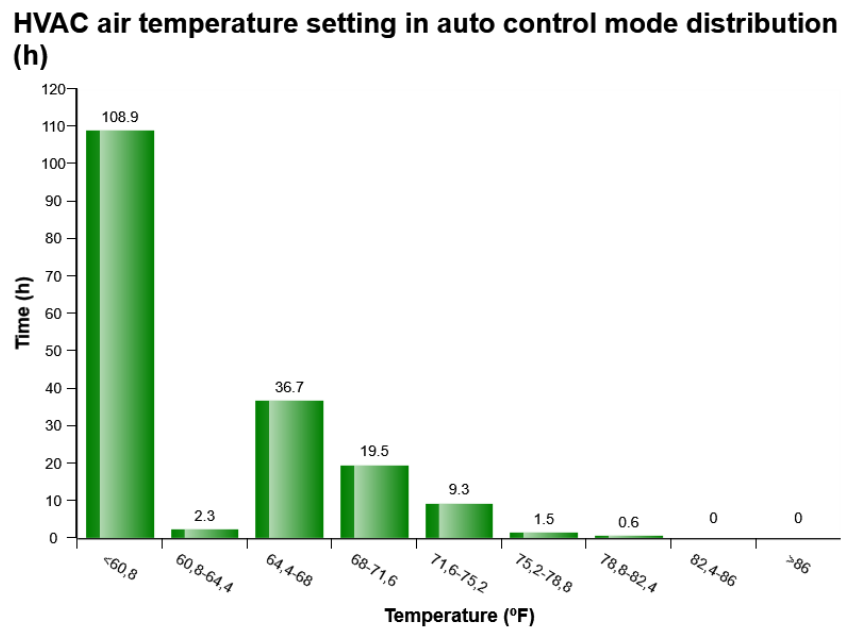


Definition:


The diagram describes air temperature setting distribution for HVAC auto control mode established by operator in Cabin



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

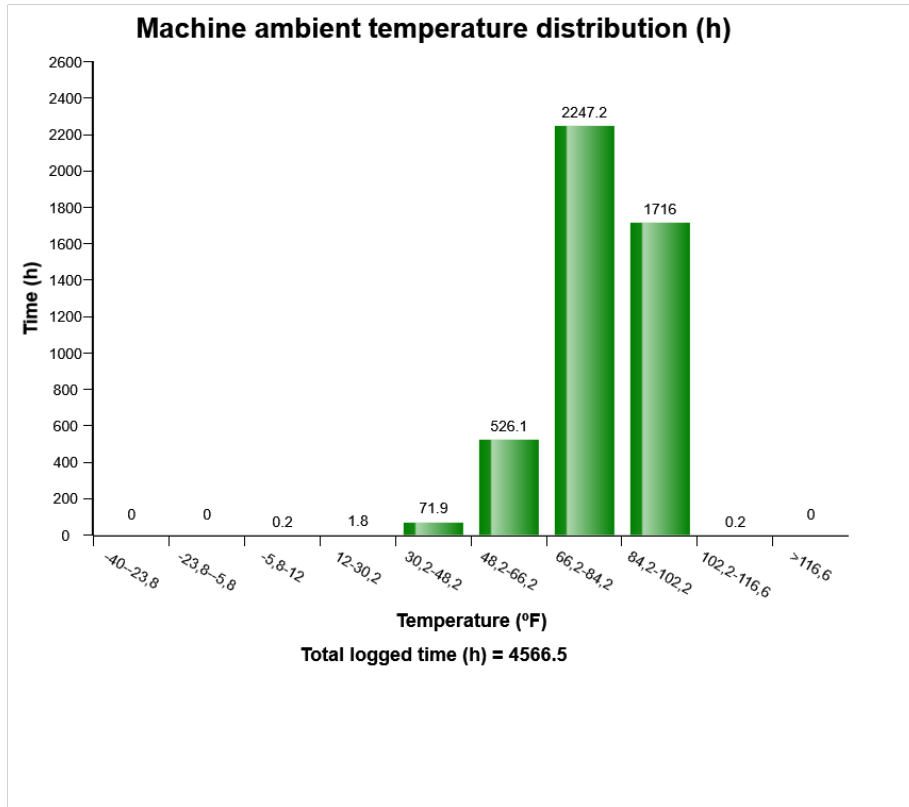

Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

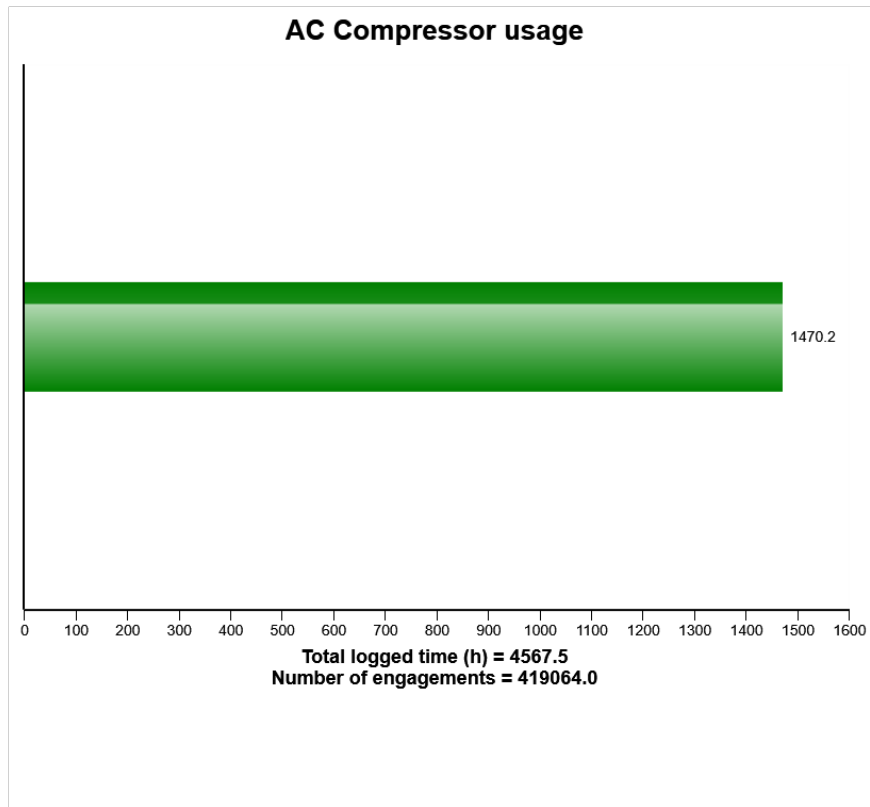

Definition:

The graph shows the total time of AC compressor engagement.

Explanation:

Green bar: Total time in hours, AC compressor has been engaged.

Under the graph the total engine running time (in hours) is displayed.

Total number of AC compressor activations is also displayed.




Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

-



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

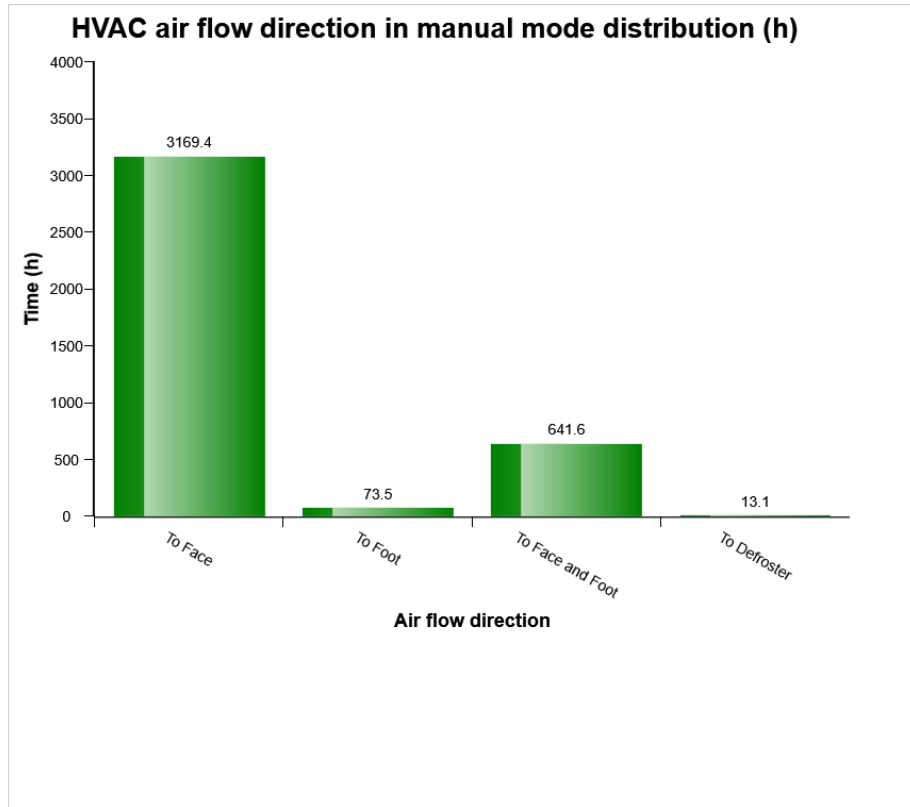


Definition:

The diagram describes air flow direction distribution for HVAC manual control mode established by operator in Cabin.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

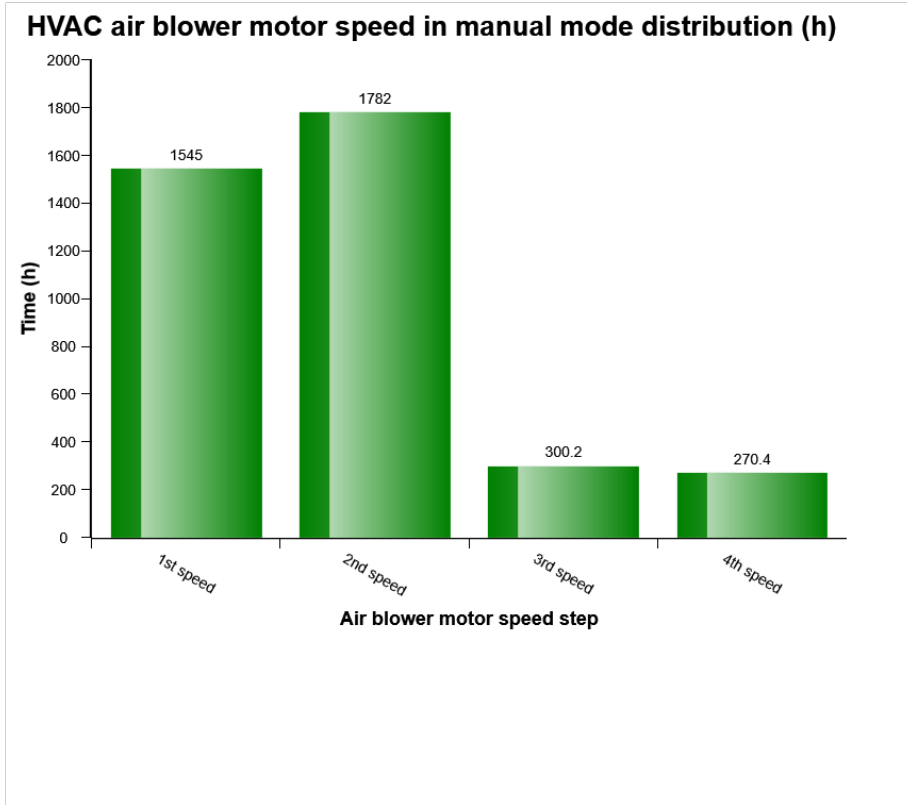

Definition:

The diagram describes air blower motor speed distribution for HVAC manual control mode established by operator in Cabin.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

hours is displayed in the first column, followed by year, month , day , hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed

Duration :

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Extreme value :

The extreme value column displays the most extreme value during the event.

Criteria :

Logging is performed when, High AC Pressure signal is active. Ambient temp is viewed.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

hours is displayed in the first column, followed by year, month , day , hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed

Duration :

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Extreme value :

The extreme value column displays the most extreme value during the event.

Criteria :

Logging is performed when, Boiling protection signal is active. Ambient temp is viewed.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

hours is displayed in the first column, followed by year, month , day , hour and minute to show when an event has occurred.

The rows are not ordered chronological (The latest event may be in the middle).

Only one event per minute is registered.

Over the table the total number of events is displayed

Duration :

The duration of each event is shown after the timestamp of the event.

The duration is counted as long as the criteria is fulfilled.

Extreme value :


The extreme value column displays the most extreme value during the event.

Criteria :

Logging is performed when, AC cut out pressure signal is active. Ambient temp is viewed.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

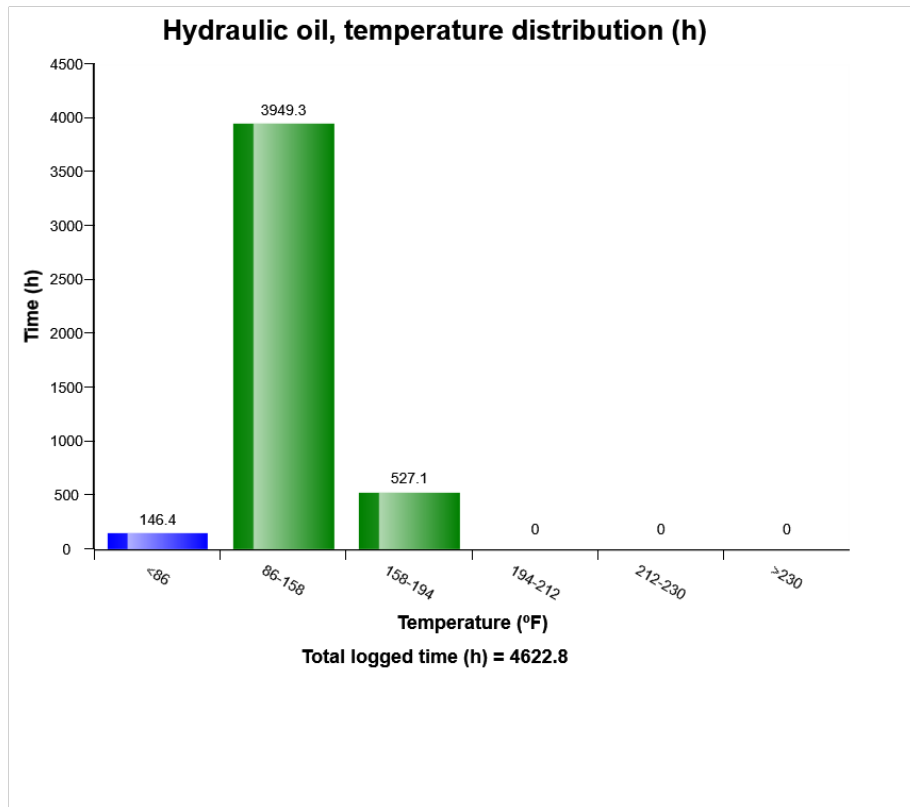

Definition:

The graph shows the time distribution of the temperature, while engine running.

Explanation:

Y-axis: Time

X-axis: Temperature distribution in classes.

Blue bar = Warm-up phase.

During the engine warm-up phase, this temperature region is passed.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

It is normal to have registrations in this region.

Green bar = Normal working temperature. The Major part of the registrations shall be in this region.


Yellow bar = High working temperature. It is normal to have some registrations in this region.

Red bar = Alarm.

Registrations in this region is not normal, running in this region may cause severe damage.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

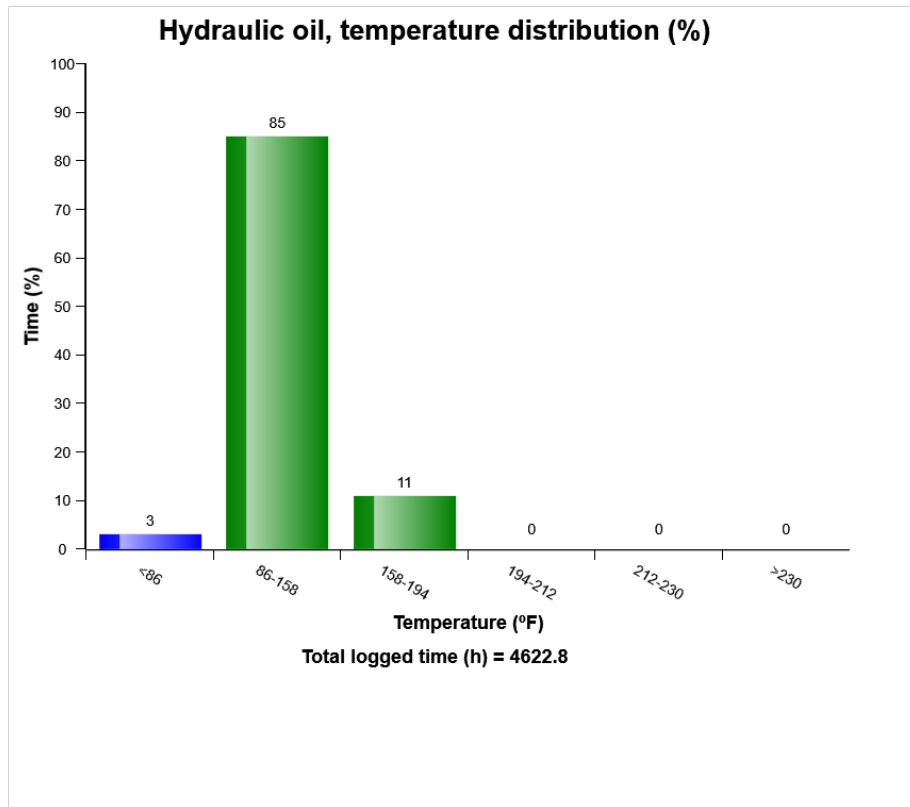

Definition:

The graph shows the time distribution of the temperature, while engine running.

Explanation:

Y-axis: Time

X-axis: Temperature distribution in classes.

Blue bar = Warm-up phase.

During the engine warm-up phase, this temperature region is passed.



Machine model	SerialNo	Operating Hours	Reading Date
A40G	341218	4623.4	1/6/2019

It is normal to have registrations in this region.

Green bar = Normal working temperature. The Major part of the registrations shall be in this region.

Yellow bar = High working temperature. It is normal to have some registrations in this region.

Red bar = Alarm.

Registrations in this region is not normal, running in this region may cause severe damage.

